

Coillte

WSX Mobile Solution

Garmin 780

© 2021 Trimble, Inc - All Rights Reserved - Confidential and Proprietary Information



Login





Please ensure you are logged into the WSX Mobile App every day while you have a Coillte load on-board.

Your TRP's will not work correctly if you are not logged in.



Trimble WSX Mobile - Truck Driver			🔺 🤝 🕞 🗄
JOBS	MESSAGES	STOCK	SETTINGS
			🔰 🗄 🍫 (0)



Request TRP - New TRP



Request TRP - New TRP (contd.)



Request TRP - New TRP (contd.)

12			
Trimble WSX Mobile - Truck Driver			🔺 🗢 🗗 🗄
JOBS - 1	MESSAGES - 1	STOCK	SETTINGS
			🔰 🗄 🍫 (0)

Please wait for WSX to process the TRP request for CE02/H0076





	DANT [DANT]	95.29km (0/S/N	() 📑 🙀 🗐
11:19 Wednesday	28/07/2021		CONFIRMED
CE02/H0076	P SS 3.0	OSB	3021618



Loader Identification



Once your Job Status has triggered to At Crew you will now receive a Loader Identification prompt. You will be required to identify who has loaded your trailer before proceeding.

- Self-Loader
- Forwarder
- Loading Truck



Delete TRP





Edit TRP



	X
Contractor [AFL]: Truck [DANT] and Trailer [AFL6]	
Thu 29/07/21 19:12	
Thu 29/07/21 20:42	
Maghera - MAGHERA -	
CE02 - H0078	
99	
005 / OSB - Smartply Europe Ltd / Pulp	
OSB - Smartply Europe Ltd	

>

ø

<u> </u>			
Edit Job			? i 😣 >
	29/07/2021 19:12		• 🕗
Truck Company:	AFL - Trimble Forestry		
Truck:	DANT (DANT)	Backload Type:	No Backload
	AFL - AFL6 (AFL60)	Permits:	
	🌑 Staging: 🌑	Staging Area:	
	3022010 CE02 - H0078 OSB - Smartply Europe Lto P SS 3.0	Unit: Truck & Traile	er (1/1) 🛛 🗠

Edit Up	lift			
			CAN	ICEL
5				
Edit Uplift			(2 😣 🖬
Unit:	Truck and Trailer	Docket:		
Log Org:	CF - Coillte			
Forest:	CE02 - Maghera			
Harvest Unit:	H0078 - MAGHERA			
	99			
Sales Order:	005 - OSB (Pulp - SS - 3.00)			
	Pulp			
	OSB - Smartply Europe Ltd			
	P SS 3.0			

<u></u>			
ob			? 🔋 😣 >
	29/07/2021 19:12		• 🧹 🔥
k Company:	AFL - Trimble Forestry		
k:	DANT (DANT)	Backload Type:	No Backload
	AFL - AFL6 (AFL60)	Permits:	
	🍏 Staging: 🌒	Staging Area:	
	3022010 CE02 - H0078 OSB - Smartply Europe Ltd P OC 3.0	Unit: Truck & Traile	r (1/1) 🔸

Confirm Job Submit			
Do you v	vant to sub	mit the Job ch	anges?
		Ν	IO YES
			📋 🧮 🍣 (0)
			AT CREW
			3022010



Edit TRP (contd.)



Manual Statusing

Loading Area & Destination

Attention:

Loading Area does not have an established geofence, manual update of job status required for this stop



In some cases, there is not a geofence setup yet for a forest or destination (e.g. Miscellaneous Customers)

In this case you will be required to manual status yourself when you arrive at the correct location.

Attention:

Destination does not have an established geofence, manual update of job status required for this stop



Weighing Procedure



Jobs Statuses

If you are in the correct Forest/Loading Area , you will see a "AT CREW" status

You must contact us before you arrive at the customer if you do not have "LOADED" for your job

Please ensure you are checking this regularly





Troubleshooting



Job Info:

GPS Source: Tablet

Auto Log-Out Count: 11 - M[0], S[10], I[1]

Now: 01/09/2021 10:33:48.045

Last Status Cycle: 01/09/2021 10:33:47.092 Last GPS Ping: 01/09/2021 10:33:48.008 Last Web Cycle: 01/09/2021 10:33:28.105

Check Last GPS Ping to check if it's up-to-date if you are having continuous issues with your jobs autostatusing If waiting for a response back on a job request check SQL contains [1,1]. Please drive to another suitable location with better data coverage

SQL [Jobs, Uplifts]: [0, 0] Memory [Jobs, Uplifts]: [0, 0]

Dockets: 0 Status: 0 Message: 0 Stock Calls: 0 DeleteQueue: 0 Create Requests: 0 Errors (GPS Scrape): 0

Data Info:

Attention:

Your request could not be completed. Please ensure you are in cellular coverage and try again

OK

If in poor data coverage please drive to another suitable location and try again



Troubleshooting

If you are having persistent issues with coverage please check **Diagnostics Report**, all 5 should have a green ticks

Restart BT5 Comms if Mantle Sync Test time is not up-to-date or if there is any red errors



≫ Diagnostics		
Vehicle Connection Status Click for more info		
GSM/Internet Connection Connected		
RCOM Server Status Logged In		
Mantle Sync Test 2021-06-02 12:10		
Mantle Connection Status OK		
Restart Tablet Restart BT5 Comms		





Troubleshooting

Contact Details Icons Trimble Email: tfl_galway@trimble.com WSX List Mobile Battery GPS Staging **ORBCOMM** Email: fmsupport@orbcomm.com Data Data **Trimble Phone: 091-735728 ORBCOMM Phone: 01-5824013** Over Log Out Settings Navigation **Tutorial** Night **Support Hours:** Mon -Fri: 06:00 – 19:00 **Out-of-Hours Emergency Support provided** ₽ •



Tips & Hints

- Create your next/first job for the collection day onboard as far in advance of your proceeding into the Forest/Loading Area as is possible recommended minimum of 15 mins before you hit the Forest/Loading Area
- Ensure that you are in good mobile phone reception when you are creating a job onboard
- If you ever need to be on Coillte property without a job/permit onboard, you must notify us in advance of entering the given property by sending us a text on the device





Security Alerts

Types Breach Investigations



Security, Geofence & Job Statusing

- A geofence is a virtual perimeter which is linked to GPS-linked mapping data for Coillte properties and customers. It interacts with the GPS antenna with your ORBCOMM device
- It allows us to move your job through the various phases that it needs to go through in order to appear on whatever customer you are going to
- It also serves as part of the Smart Timber Security Package. As your truck passes a geofence around a forest, queries are sent out to your device, ascertaining whether there is a valid job on the system



